




OMIX-ADA, Inc.

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Part #13260.13

4-Door C3 Configurable Cargo Cover

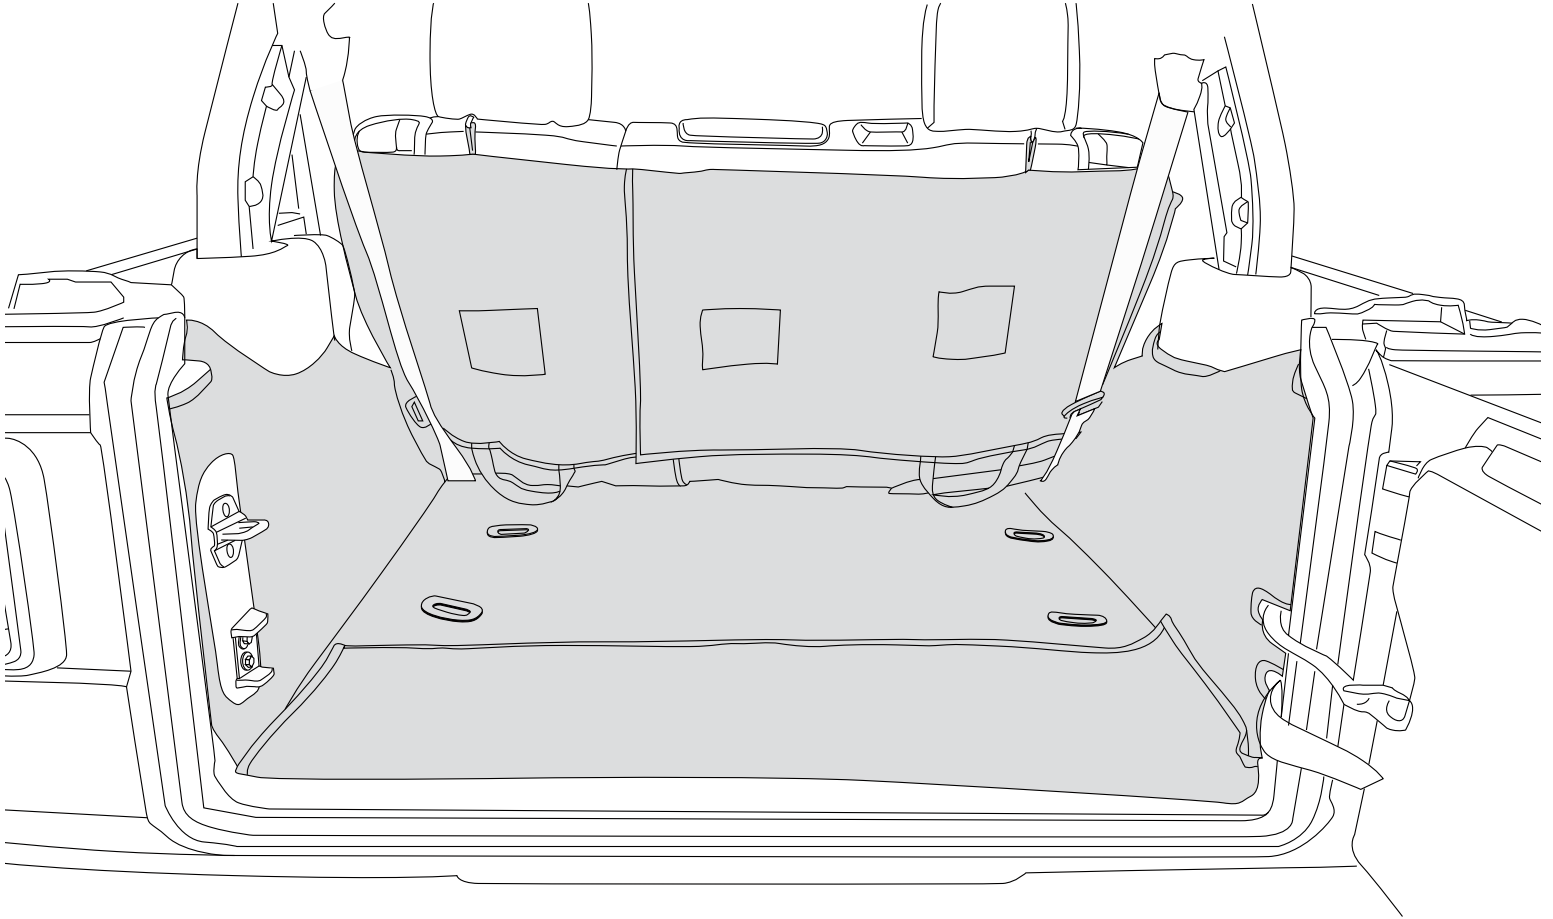

Components

- 1. Cargo Cover (1)
- 2. Hook and Loop Strip (2)
- 3. Adhesive Promoter (1)

Required Tools

- 1. Scissors
- 2. Isopropyl Alcohol
- 3. Brush or Swab
- 4. Plastic Putty Knife

OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | TICKET: www.omixsupport.com

FOR WARRANTY INFORMATION VISIT: www.Omix-Ada.com



OMIX-ADA, Inc.


460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

4-Door C3 Configurable Cargo Cover

1. Open tailgate, pull weather strip away from left and right side.


NOTICE For steps 2 & 3. Clean area thoroughly with isopropyl alcohol. Brush promoter with brush or cotton swab. Allow 60 seconds for promoter to dry before applying Hook and Loop Strip.

2. Place long Hook and Loop Strip to left hand rear tailgate trim. Cut to length if needed.

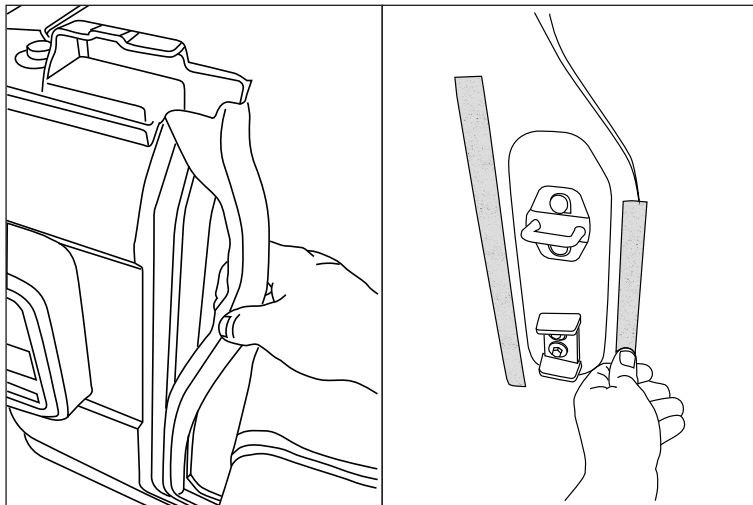


3. Place Hook and Loop Strip to right hand tailgate trim. Cut to split between tailgate stop arm.

4. Lower rear seats and place Cargo Cover into vehicle. Fabric side facing up.

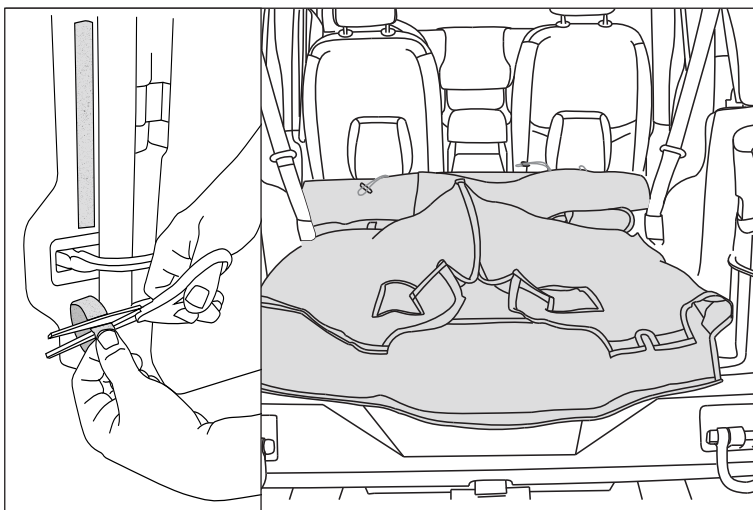

5. Unfold and attach hook strip to top of folded rear seat carpet. Align edges and anchor windows.

6. Attach plastic hooks to headrest slots. Install Cargo Cover sides to Hook and Loop Strips applied in step 1 & 2. Press weather strip back into place.

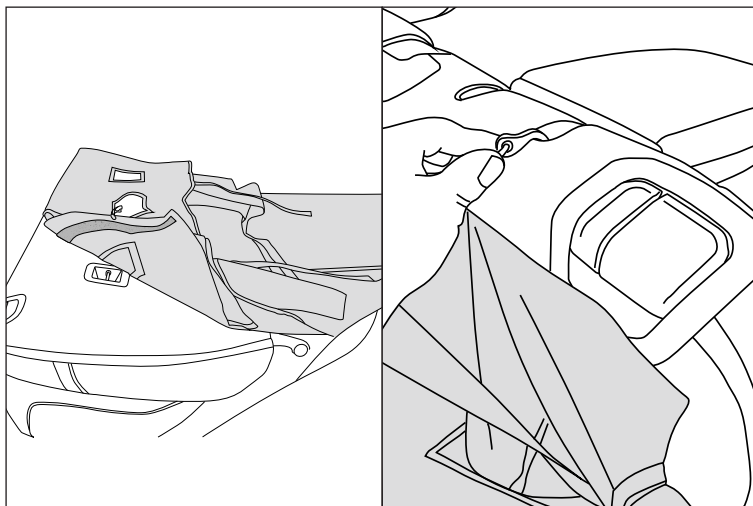




OMIX-ADA, Inc.

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

4-Door C3 Configurable Cargo Cover


7. Wrap Cargo Cover around sport bar and connect with hook and loop. Using a plastic putty knife, insert edges of Cargo Cover between carpet and underside of body tub. Allow front section to rest over wheel well and around seat belt.

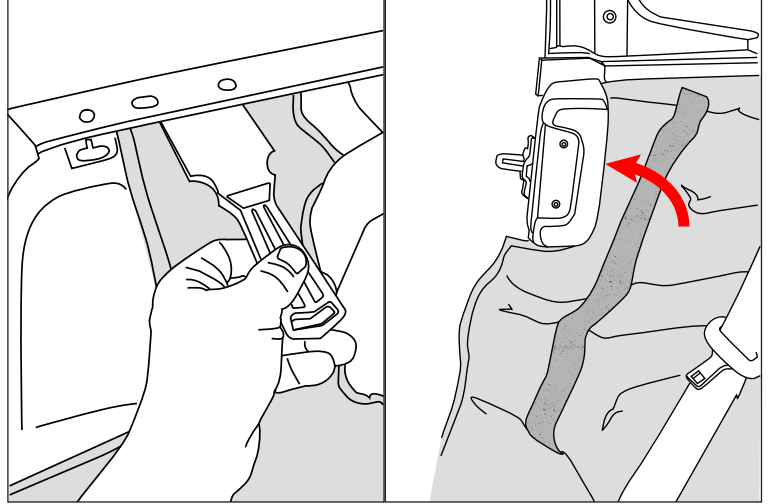


8. Insert Cargo Cover behind rear door latch trim on both left and right side.

For full coverage of cargo area:

9. Release hook and loop strips securing side door coverage from the back of seat. Swing sides up and attach to hook and loop near the seat belt.

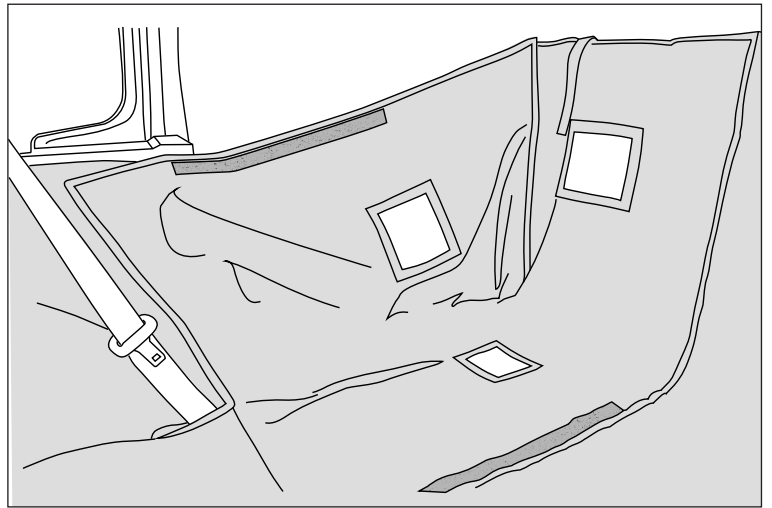

10. Loop straps around driver and passenger headrest to secure top portion of Cargo Cover upright.

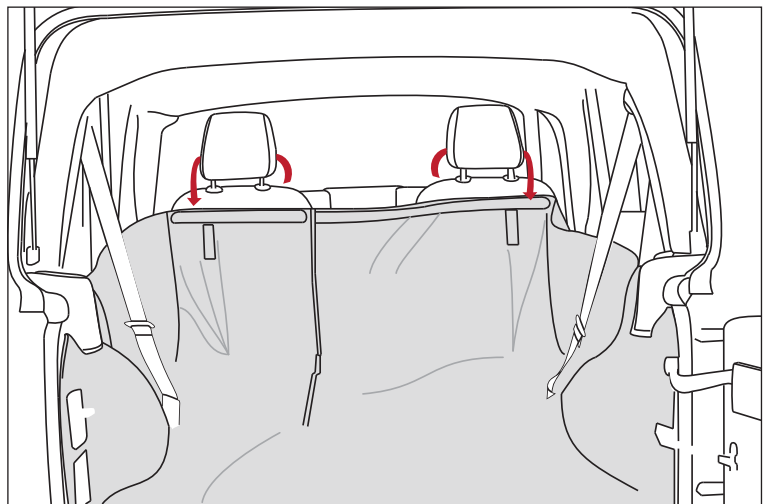



OMIX-ADA, Inc.

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

4-Door C3 Configurable Cargo Cover

For 4-Door 60/40 Rear Seat Split:

Remove front seat hook and loop straps from desired side. Release hook and loop strip along 60/40 split and raise desired seat section. Fold fabric up to back of rear seat. Secure lower strap to footman loop at base of rear seat.

