

Installation Instructions

97-06 Jeep Wrangler TJ

I-93317 Rev A



California Brief Top

For proper installation and best possible fit, please read all instructions **BEFORE** you begin.
For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-328-2409.

Pre-Installation Requirements



For correct installation, mounting surface of part should be between 70-95° F (21-35° C) prior to installation. Remove existing hard or soft top. For OEM (original/factory) soft tops, also remove: Windshield header channel, Tube hardware, side door surrounds can be used if wanted. Brief Top works with or with out door surrounds.

Important Notes

Installation requires an aftermarket Windshield Channel (Rampage Products Part # 901004)

Installation Steps


1. Locate the rubber blade on front edge.



2. Place the Brief on top of Jeep. Insert rubber blade into Windshield Channel, working from one side of vehicle to the other.



3. Locate 2 Velcro straps in each front corner of the Brief.
- Wrap Strap A over the top of the bar towards the inside of the vehicle. The Velcro of Strap A should be facing outward from the roll bar.
 - Strap B wraps around the outside of the roll bar.
 - Attach Strap B to Strap A on the underside of the roll bar.
 - Do both driver and passenger sides of the vehicle.

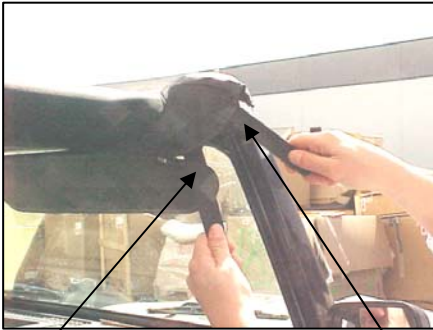


Strap A

Strap B



Wrap Strap A over top of roll bar

Strap B

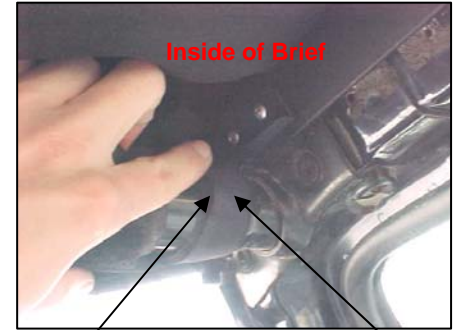

Inside of Brief

Strap A

Strap B

4. Locate the Velcro flaps on each side of the roll bar. Open and wrap flaps around roll bar, pull tight and press together to close. Do both driver and passenger sides of the vehicle.



5. Locate the center strap along the central roll bar. Run the center strap around the rear and under the central roll bar forward to the Footman Loop near the top center of the windshield. Run strap through Footman Loop and feed strap through its buckle securely.



6. Locate the corner rear strap and wrap around the roll bar and fasten into the buckle. Do both the driver and passenger sides.



7. Locate the two straps by the central roll bar and wrap around the bar. Insert the strap into the buckle and tighten. Do both the driver and passenger sides of the vehicle.



8. Re-adjust Velcro and tighten all straps to assure a wrinkle-free fit.

Care and Cleaning

Wash only with mild soap & dry with a clean cloth.
Do not use cleaning solvents of any kind.

Congratulations!

Your new California Brief Top™ is installed! Now go enjoy the ride.

Thank you for purchasing one of the many quality Rampage® products offered by Lund International, Inc. We take the ultimate pride in our products and hope you receive years of satisfaction from your investment. We have made every effort to guarantee that your product is of the highest quality for fit, durability, finish, and ease of installation.



800-328-2409 • Visit us at Rampageproducts.com
Rampage Products is a trademark of Lund International, Inc.