

Installation Instructions

2018+ Jeep Wrangler JL
& JL Unlimited




MT-02
Part Number
91817 & 92525

For proper installation and best possible fit, please read all instructions BEFORE you begin.
For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-328-2409.


Installation Steps

Unfold your new Mesh Brief Top™ and lay onto a top of roll cage bars.

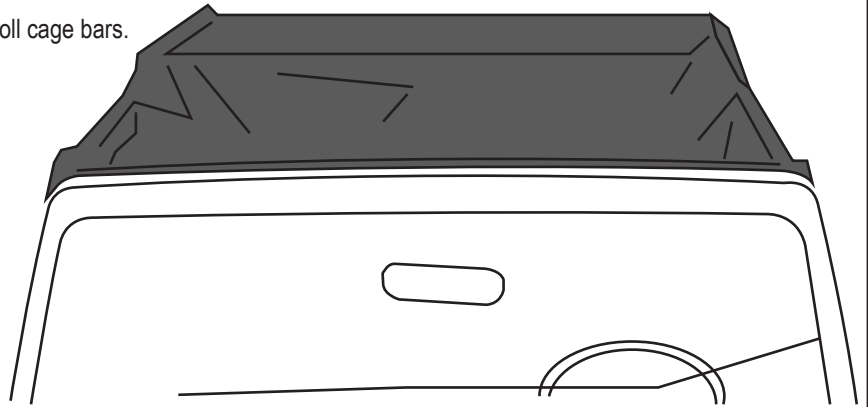


1

Tucking inside and secure with bungee straps as shown.

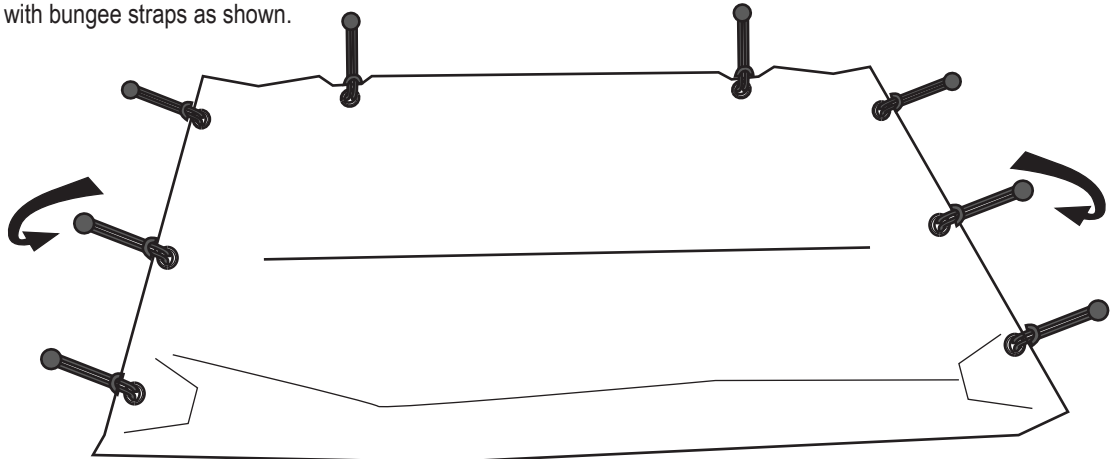

2

Secure with bungee strap around roll cage as shown.

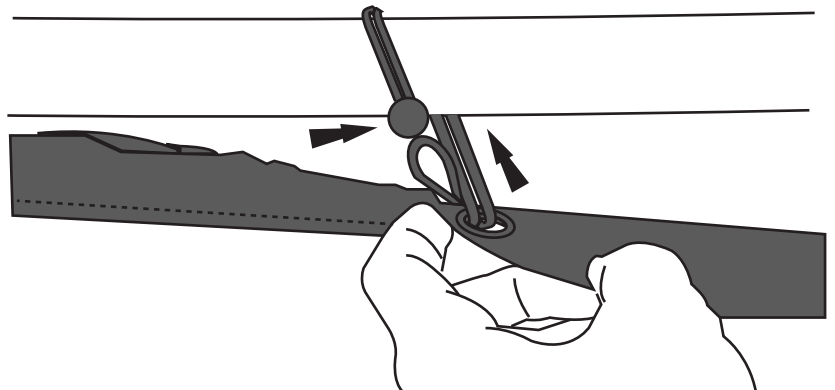


3

Installation Steps



NOTE: Actual application may vary slightly from illustrations.

Attach the bungee to the windshield loop above the sun visor.

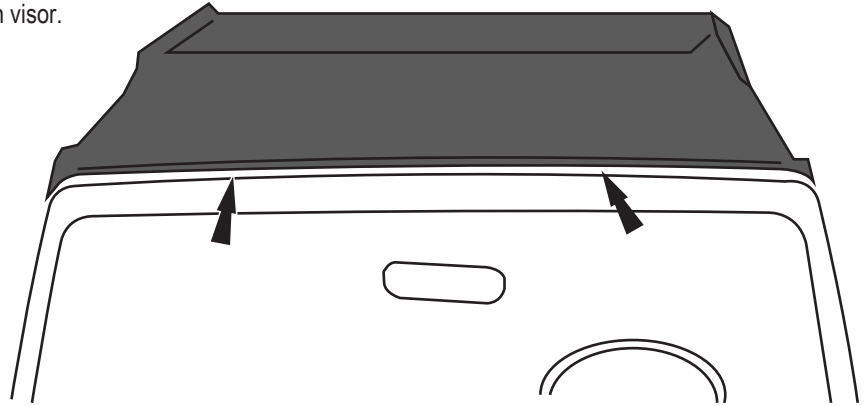

4

Tighten and adjust Mesh Top as needed to be centered on top the roll cage.

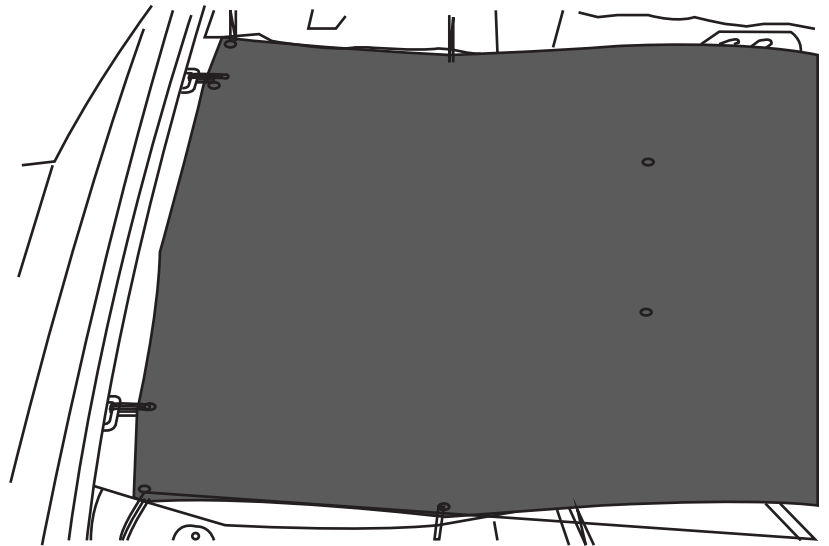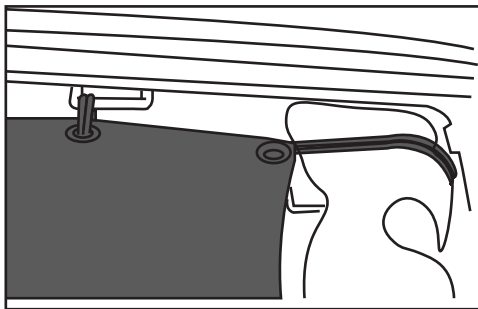

5

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.
- Do not use cleaning solvents of any kind.

Congratulations!

Your new Mesh Brief Top™ is installed! Now go enjoy the ride.

Thank you for purchasing one of the many quality Rampage® products offered by Lund International. We take the ultimate pride in our products and hope you receive years of satisfaction from your investment. We have made every effort to guarantee that your product is of the highest quality for fit, durability, finish, and ease of installation.



800-328-2409 • Visit us at Rampageproducts.com

Rampage Products is a trademark of Lund International.

