



TOYOTA 2010-20 4 Runner Skid Plate Spacer

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Periodically check all hardware for tightness.

Kit Contents:
5/8" Spacers x6

Tools Needed:
17mm Wrench or Socket

Hardware Included:
10mm x 45mm Bolt x2
10mm x 65mm Bolt x2
10mm Flat Washers x4
Clear Retainer x4




Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





INSTALLATION INSTRUCTIONS

1. Install (1) on the 10mm x 65mm bolts into the front hole of the skid plate using (1) of the 10mm flat washers. **See Photo 1.**
2. Place (2) of the supplied 5/8" thick spacers onto the bolt and secure using the clear retainer. **See Photo 2.**
3. Repeat steps 1 and 2 on the opposite front hole of the skid plate.

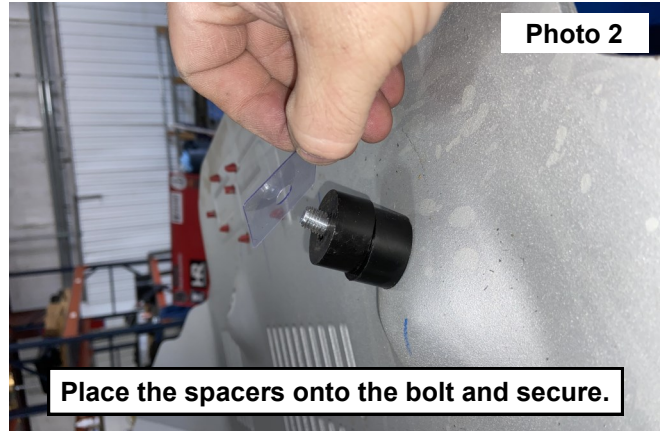

4. Install (1) of the 10mm x 45mm bolts into the rear hole of the skid plate. Then place (1) spacer onto the bolt and secure using (1) clear retainer. **See Photo 3.**
5. Repeat step 3 on the opposite rear hole of the skid plate.
6. Place the skid plate to the vehicle and thread the bolts in to the mounting holes. **See Photo 4.**

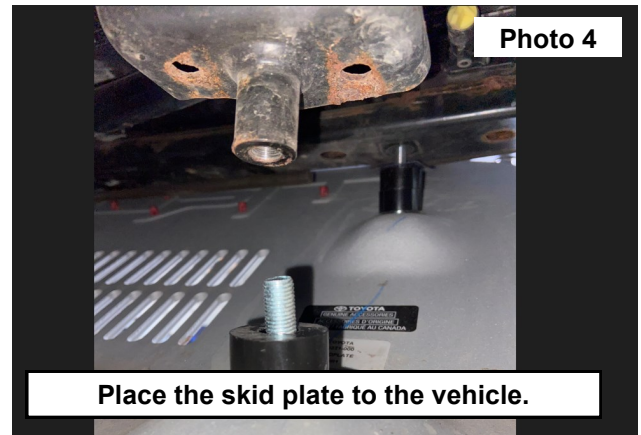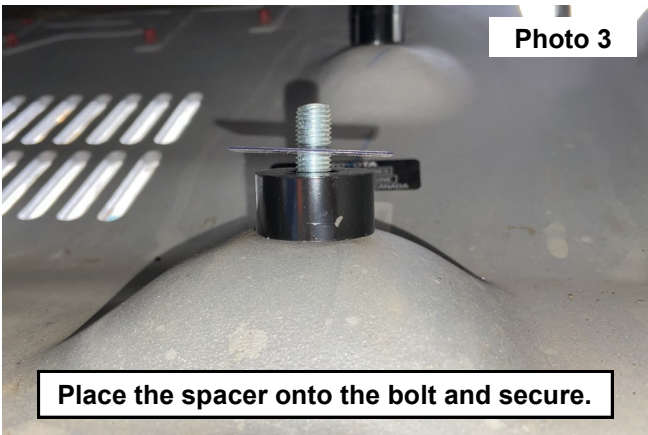

7. Tighten the (4) bolts installed into the skid plate using a 17mm socket. **See Photos 5 and 6.**

