

## HONDA 2023-24 Pioneer 1000-6 Deluxe HDPE Roof

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

### KIT CONTENTS:


- Front Roof x1
- Rear Roof x1
- Rubber Hoop Clamps x13
- Two-Sided Tape x60in

### TOOLS NEEDED:

- 4mm Allen Wrench
- 5mm Allen Wrench
- 10mm Socket/Wrench
- 13mm Socket/Wrench

### HARDWARE INCLUDED:

- 8mm x 25mm Button Head Bolts x13
- 8mm Flat Washers x13
- 8mm Flange Lock Nuts x13
- 6mm x 20mm Button Head Bolts x4
- 6mm Flat Washers x8
- 6mm Lock Nuts x4

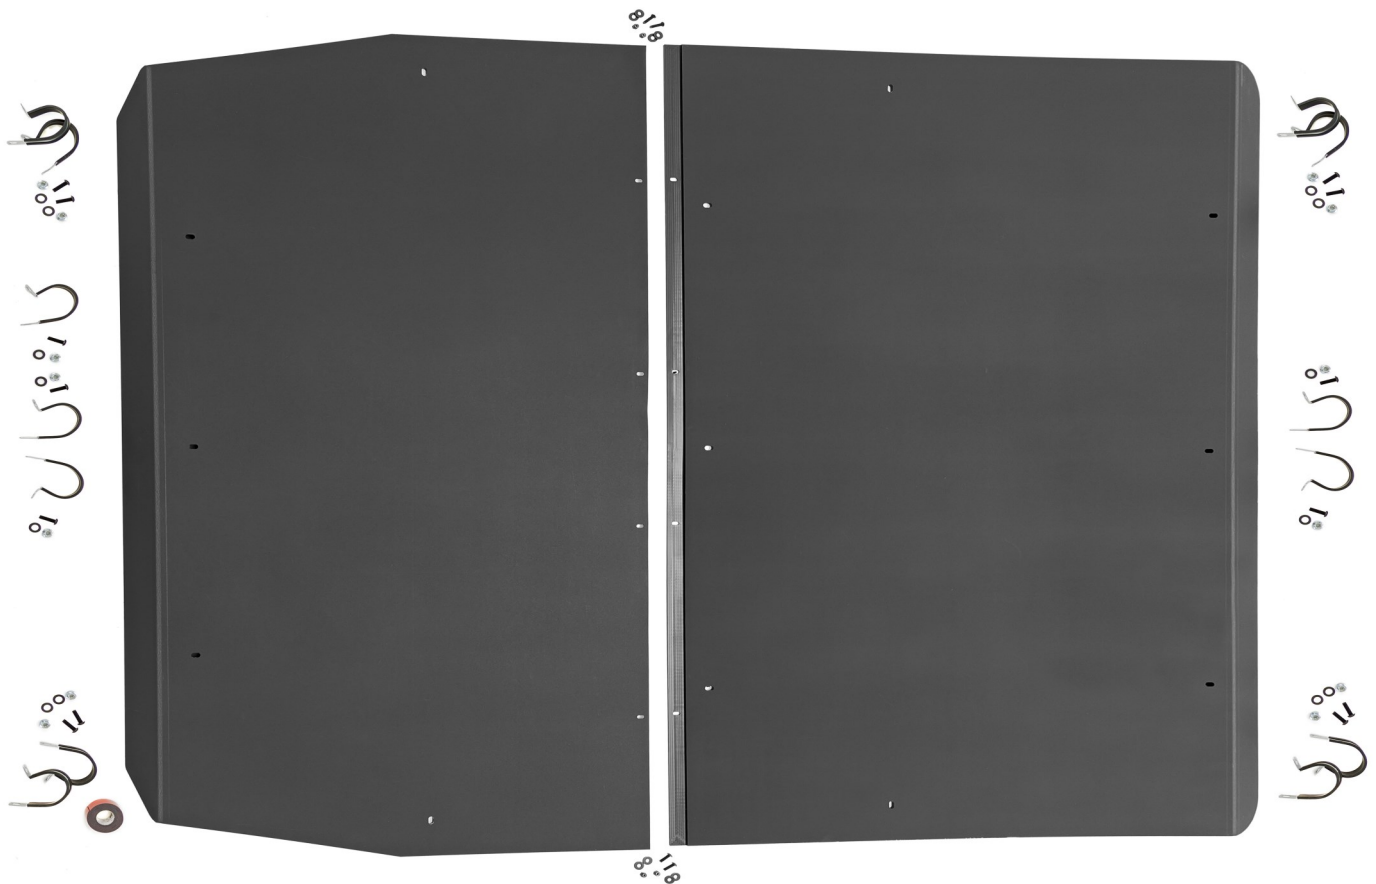

### Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

## INSTALLATION INSTRUCTIONS


1. Place the roof panels on the UTV. **See Photo 1.**
2. Install the two-sided tape along the overlap between the two roof panels and press panels together. **See Photo 2.**



3. Install the rubber hoop clamps around the cage bars and align with the holes in the roof. **See Photo 3.**
4. Install the supplied 8mm x 25mm button head bolts and flat washers through the top of the roof. **See Photo 4.**



5. Secure the roof to the clamps using the supplied 8mm flange lock nuts. Tighten using a 5mm Allen wrench and 13mm socket/wrench. **See Photo 5.**
6. Secure the roof panels together using the supplied 6mm x 20mm button head bolts, flat washers, and lock nuts using a 4mm Allen wrench and 10mm socket/wrench. **See Photo 6.** **NOTE:** You will need to cut slits in the tape to fit the bolts through.

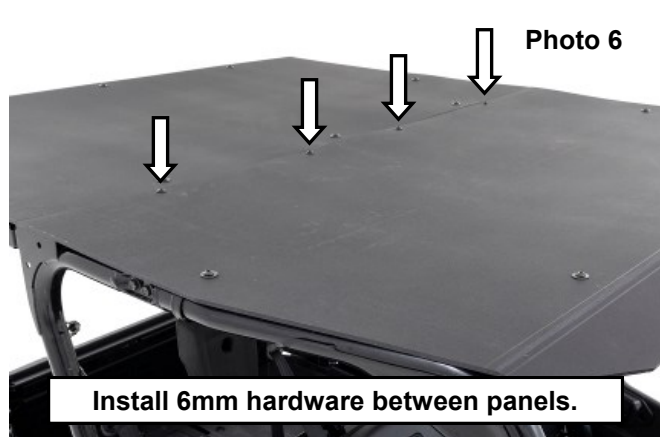

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

