

ROUGH COUNTRY

SUSPENSION SYSTEMS®

Polaris 2009-13 Ranger 800 XP Winch Bracket

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

Kit Contents:

Winch Bracket x1
Regulator Bracket x1

Tools Needed:

T20 Torx bit
14mm Wrench or Socket

Hardware Included:

8mm x 25mm Hex Bolt x5
8mm Flat Washer x5
8mm Flange Nut x5
6mm x 25mm Button Head Bolt x2
6mm Flat Washer x4
6mm Nylock Nut x2




Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs




INSTALLATION INSTRUCTIONS



1. Remove the mesh grille and the front bumper from the front of the UTV using a T20 Torx bit. **See Photo 1.**
2. Remove the (3) lower bolts from the bumper using a 14mm socket. **See Photo 2.**

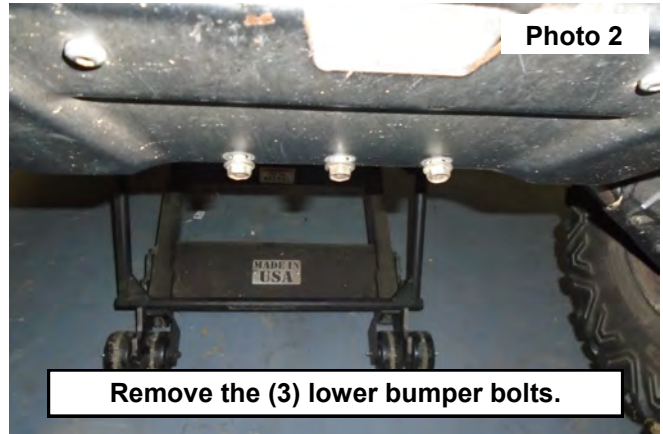

3. Remove the (2) upper bolts and nut using a 14mm socket. **See Photo 3.**
4. Swap the bracket on the voltage regulator using the OE hardware. **See Photo 4.**

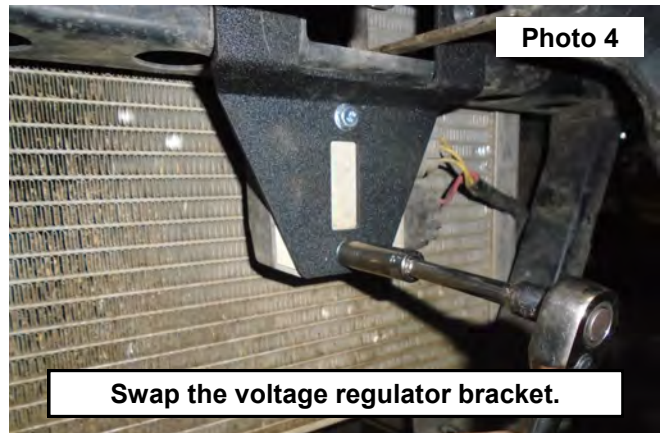


5. Install the winch plate using (3) of the supplied 8mm hex bolts, (3) 8mm flat washers and (3) 8mm flang nuts. **See Photo 5.**
6. Install the winch onto the winch plate using the hardware supplied in the winch kit. **See Photo 6.**

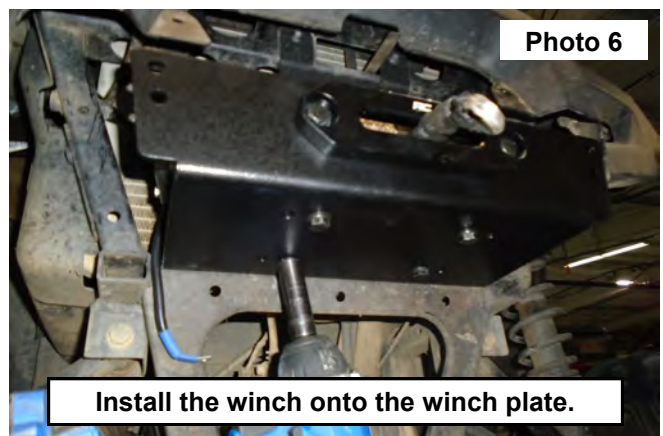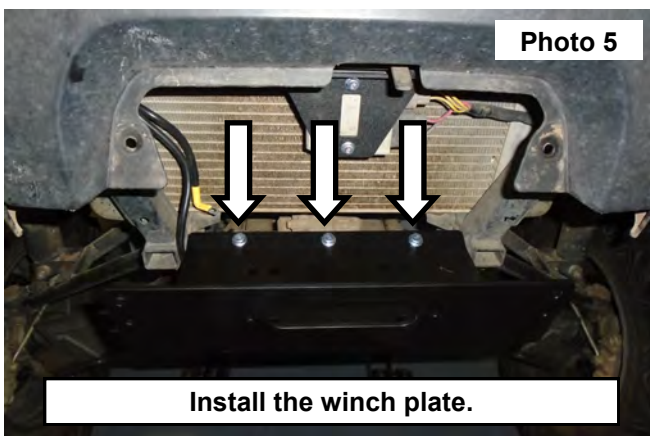

7. Install the hawse fairlead to the winch plate using the hardware supplied in the winch kit. Then insert the cable through the plate. **See Photo 7.**
8. Connect the winch wiring to the UTV's power supply.
9. Install the bumper onto the UTV, secure the bumper using the OE hardware. **See Photo 8.**



10. Secure the front of the winch plate to the bumper, use the OE bolts in the bottom (2) holes. Secure the upper bolt holes using (2) of the supplied 8mm hex bolts, (4) 8mm flat washers and (2) hex nuts. Tighten using 13mm sockets and wrench. **See Photo 9.**
11. Install the OE mesh grille using the OE hardware. **See Photo 10.**
12. Tighten the bumper bolts using a 13mm wrench and socket.

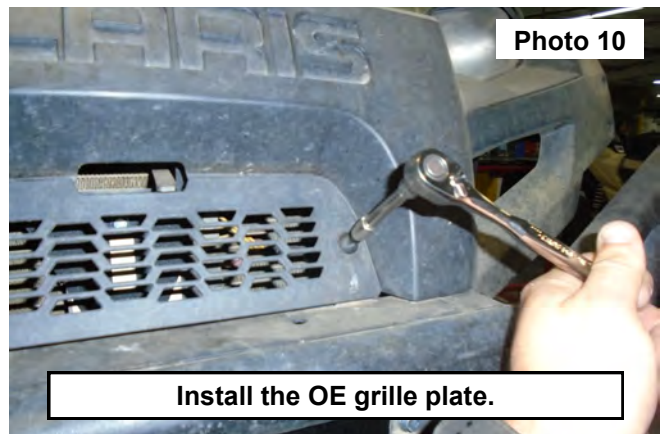

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.



