

ROUGH COUNTRY SLIM HARD SHELL TENT

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Periodically check all hardware for tightness.

IMPORTANT INFORMATION: PLEASE READ BEFORE BEGINNING INSTALLTION

The Rough Country Tent will mount to factory or after market roof rack configurations. Utilizing the adjustable mounting rail hardware capturing all applications and other mounts other than the intended track mount could be needed depending on type of mounting desired and are not included.

Check manufacturer rack capacities before installing. Rough Country is not responsible for damage as a result of mounting to factory rack that are not rated for the load intended when tent is installed.

It is recommended to erect tent in calm conditions. Mild to high winds can hinder deployment of the tent. Always use caution when deploying tent in any conditions. Not for use when in motion. Always take into consideration the added height of the tent on top of the vehicle concerning any low hanging obstacles and the added weight of the tent. It is important to check local and state laws regarding roof mounted load capacities. The Rough Country Tent weight is approx. 200 lbs. Always use caution near any open flame or heat source and do NOT use any open flames in side the tent. The tent will be generally be utilized as a side entrance but also can be uses as a rear entry if clearance allows. Mounting brackets will need to be relocated




Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs




INSTALLATION INSTRUCTONS


- Remove the packaging from the tent. Make sure all components have been removed from the packaging before discarding.
- 2. Locate the top accessory rails and the rail brackets and hardware. See Photo 1.
- 3. Insert the supplied 6mm nylock nuts into the rail as shown in **Photo 2**.



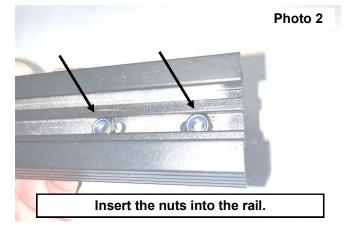


- 4. Position mounting bracket as shown and install supplied 6mm x 12mm hex bolts. Snug but do not tighten with a 10mm socket. See Photo 3 & 4.
- 5. Place the supplied end caps into the rail.

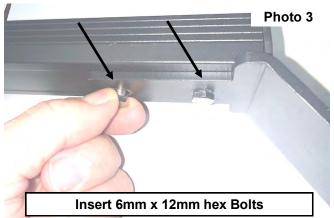

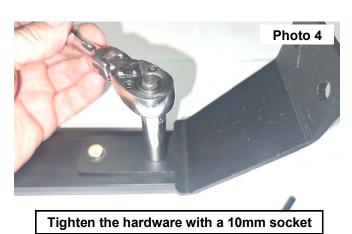

- 6. Locate the 8mm x 10mm allen head bolts and the 8mm threaded rail inserts. See Photo 5.
 7. Install the 8mm x 10mm allen head bolts in the mounting bracket with the 8mm threaded rail inserts. See Photo 6. Do not tighten at this time.



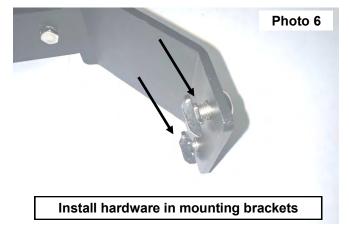




- 8. Install the cross bars on the top of the tent by positioning the 8mm hardware in the side rails on the tent top. Adjust the width as needed to install the rails and tighten the bars to the side mounts using a 10mm wrench. Tighten the assembly to the side of the tent with the included allen wrench. **See Photo 7.**
- 9. Place the 8mm x 55mm bolts into the sliding brackets. See Photo 8.






- 10. Mounting may vary depending on mounting preference or additional hardware supplied with non-Rough Country kits used to mount the assembly to your vehicle. Mounting is shown on the Rough Country roof rack. Install (4) of the sliding brackets and bolts into the mounting rail. Place (2) on each side.
- 11. With assistance, place the tent on the rack. Position tent on the rack and secure using the supplied flat mounting straps and 8mm nuts. **See Photo 9.** Tighten the hardware using a 13mm wrench.
- 12. Install the end caps onto the mounting rail. See Photos 10.

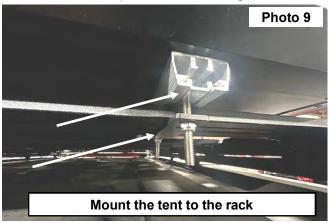



- 13. Unlock the latch if needed with the supplied key and unlatch the two latches. See Photo 11.
- 14. Install the handle if not previously installed using the supplied rail retainers and 8mm x 16mm bolts.
- 15. Push the top up to raise the tent. See Photo 12.




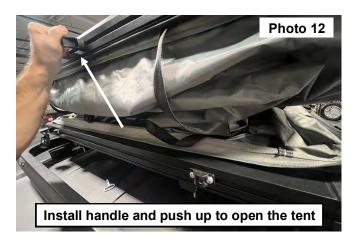





16. Locate the included collapsible ladder and the prop rods in the tent.

17. Position the prop rods in the rain fly / door and into the rail location. **See Photo 13, 14, 15 & 16.** The prop rods on the frame of the tent will be installed at an angle. Please ensure the rods are fully engaged in the mount.

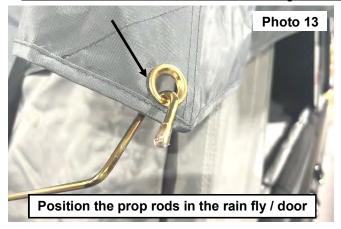


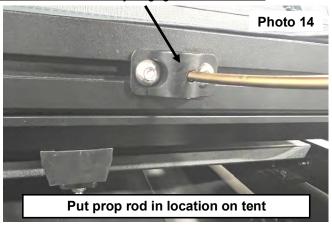

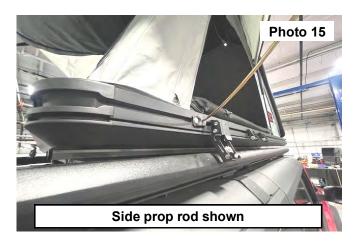



- 18. Install the ladder on the side of the tent by hooking the ladder into location as shown. Fully extend the ladder to the ground ensuring the locks on the ladder rungs are engaged. **See Photo 17.**
- 19. Locate the accessory bag included with the tent and slide it into the lower channel as shown in Photo 18.

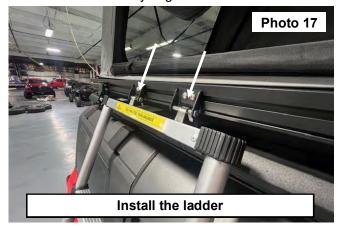





- 20. Always ensure the ladder is on solid ground before entering and exiting the tent. Once inside the tent the window openings can the rolled and secured in the up position if desired using the strap retainers.
- 21. The tent is equipped with a Led light strip and is powered by the USB plug. An accessory kit is included with the tent and wiring can be routed inside the vehicle to be powered by 12 volts. **See Photo 20.**
- 22. When lowering the tent make sure all fabric is inside the base. Be sure to secure the tent top to the base with the latches. It is recommended to lock the latches to prevent theft or opening of the tent.







