

SKYJACKER

SUSPENSIONS

SKYJACKER.COM

2014-2024 RAM 2500 4WD 2013-2024 RAM 3500 4WD HD OEM Replacement Steering Stabilizer Kit Installation Instructions

Required Tools List:

- SAE Sockets \ Wrenches
- Metric Sockets \ Wrenches
- Diagonal Cutting Pliers
- Safety Glasses
- Wheel Chock
- Torque Wrench



Before beginning the installation, read these instructions thoroughly & completely. Please refer to the Parts List to insure that all parts & hardware are received prior to disassembly of the vehicle. If any parts are found to be missing, contact SKYJACKER® Customer Service at 318-388-0816 to obtain the needed items. If you have any questions or reservations about installing this product, contact SKYJACKER® Technical Assistance at 318-388-0816.

Component Box Breakdown:

Part # 2014

Item #	Description	Qty
2000AS	ADX HD STEERING DAMPER, ALU	1
ADXSD	DECAL, ADX 2.0 STABILIZER	1
HB-8014	HDWR BAG: 2014 / 8014 STAB.	1

Part # 7014

Item #	Description	Qty
7000WS	STEERING DAMPER, WHITE	1
B10RS	BOOT STABILIZER, RED	1
BTIE	BOOT CABLE TIE, RED	1
HYDRO 6X2-CL	DECAL, HYDRO STABILIZER	1
HB-7014	HDWR BAG: 7014 / 9014 STAB.	1

Part # 8014

Item #	Description	Qty
8000BS	STEERING DAMPER, BLACK	1
B10KS	BOOT STABILIZER, BLACK	1
BTIE-K	BOOT CABLE TIE, BLACK	1
MXSD	DECAL, BLACK MAX STABILIZER	1
HB-8014	HDWR BAG: 2014 / 8014 STAB.	1

Component Box Breakdown:

Part # 9014

Item #	Description	Qty
9000WS	STEERING DAMPER, SILVER	1
B10KS	BOOT STABILIZER, BLACK	1
BTIE-K	BOOT CABLE TIE, BLACK	1
SSD	DECAL, SILVER STABILIZER	1
HB-7014	HDWR BAG: 7014 / 9014	1

Hardware Bag Breakdown:

Part # HB-7014

Item #	Description	Qty
HOURGLASS 5/8	HOURGLASS, 5/8 X 1.50, RED	1
HG58125	HOURGLASS, 5/8 X 1.25, RED	1
141509	ES25 SLEEVE, 1.50 LONG	1
142121	ES24 SLEEVE, 1.38 LONG	1

Part # HB-8014

Item #	Description	Qty
HG5815-K	HOURGLASS, 5/8 X 1.50, BLACK	1
HG58125-K	HOURGLASS, 5/8 X 1.25, BLACK	1
141509	ES25 SLEEVE, 1.50 LONG	1
142121	ES24 SLEEVE, 1.38 LONG	1


Pre-Installation Tips: Install Stabilizer Boot, Bushings & Sleeves.

1. Install supplied Stabilizer Boot over Skyjacker Steering Stabilizer. Attach boot to cylinder body with supplied Boot Cable Tie. Remove excess cable tie with diagonal cutting pliers.
2. **Tech Note:** Install Shorter 1.25" Hourglass Bushing \ 1.38" Steel Sleeve into Cylinder Body Eye.
Install Longer 1.50" Hourglass Bushing \ 1.50" Steel Sleeve into Shaft Rod End.
Coat Bushings with a water resistant grease & press into Each Stabilizer Eye.
Coat Sleeves with a water resistant grease & press into Stabilizer Eye Bushings

Installation: Note: Save all factory components & hardware for reuse, unless noted.


1. Chock rear tires \ wheels. Ensure that vehicle transmission is in PARK & engage emergency brake. **Note:** Be sure steering wheel \ wheels are pointing straight forward.

2. Remove OEM steering stabilizer from front center link axle bracket & from passenger side axle bracket mount.

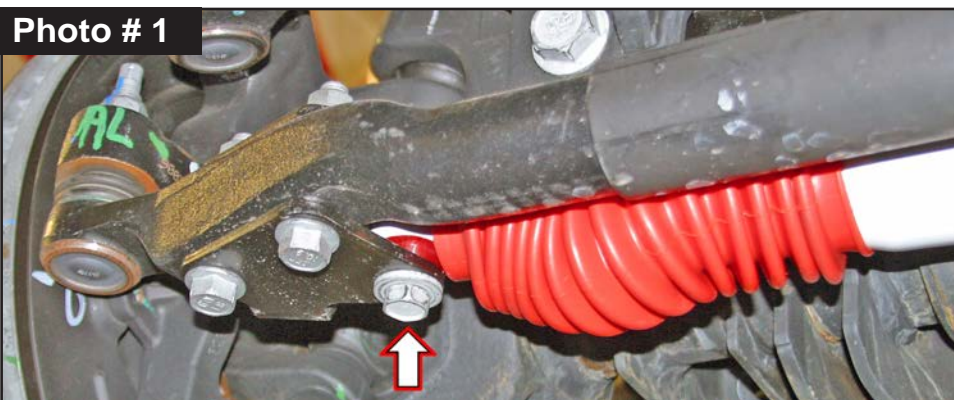

3. Install Skyjacker steering stabilizer shaft end to passenger side OEM axle bracket with OEM hardware. (Photo # 1)

4. Install Skyjacker steering stabilizer cylinder body end to OEM front center link axle bracket with OEM hardware. (Photo # 2)

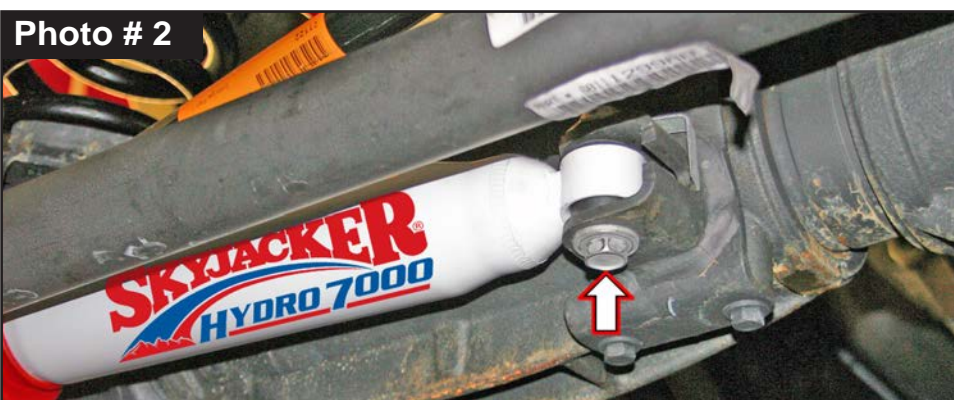

5. Tighten at passenger side OEM axle bracket. Torque 56 ft-lb.
Tighten front center link axle bracket. Torque 65 ft-lb.

6. Cycle steering from side-to-side & check for adequate clearance. Check all brackets & bolts for proper installation.

Final Notes:

- After installation is complete, double check that all nuts & bolts are tight.
- With vehicle placed on ground, cycle steering lock to lock & inspect steering for proper operation, tightness & adequate clearance.
- After first 100 miles, check all hardware for proper torque & periodically thereafter.

Seat Belts Save Lives. Please Wear Your Seat Belt.