




HOOD PROTECTOR INSTALLATION INSTRUCTIONS

- 1 LIFT THE HOOD AND REMOVE ANY DIRT OR DEBRIS.
- 2 LOCATE THE 4 HOLES ON THE UNDERSIDE OF THE HOOD THAT LINE UP WITH THE MOUNTING HOLES OF THE HOOD PROTECTOR. PLACE A PLASTIC INSERT INTO EACH OF THE HOLES.
- 3 CENTER THE HOOD PROTECTOR TO THE HOOD AND INSERT A SCREW WITH A SHOULDER WASHER THROUGH EACH OF THE HOLES AND TIGHTEN JUST ENOUGH TO HOLD THE HOOD PROTECTOR IN PLACE.
- 4 CLOSE THE HOOD CAREFULLY TO CHECK THE FIT. IF THE HOOD PROTECTOR IS NOT CENTERED, SLIGHTLY LOOSEN THE SCREWS AND MOVE IT TO ONE SIDE OR THE OTHER UNTIL CENTERED..
- 5 WHEN THE HOOD IS PROPERLY CENTERED, TIGHTEN THE SCREWS UNTIL SNUG **DO NOT OVER TIGHTEN** THIS MAY DAMAGE YOUR NEW HOOD PROTECTOR.

CLEANING: USE ONLY SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS TO CLEAN YOUR HOOD PROTECTOR.

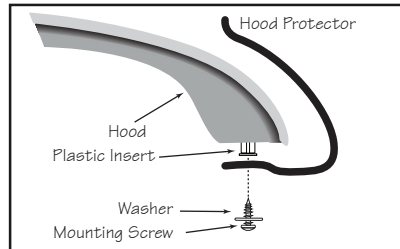

KIT CONTAINS:
 HOOD PROTECTOR
 4 MOUNTING SCREWS
 4 SHOULDER WASHERS
 4 PLASTIC INSERTS

TOOLS NEEDED:
 PHILLIPS SCREWDRIVER