
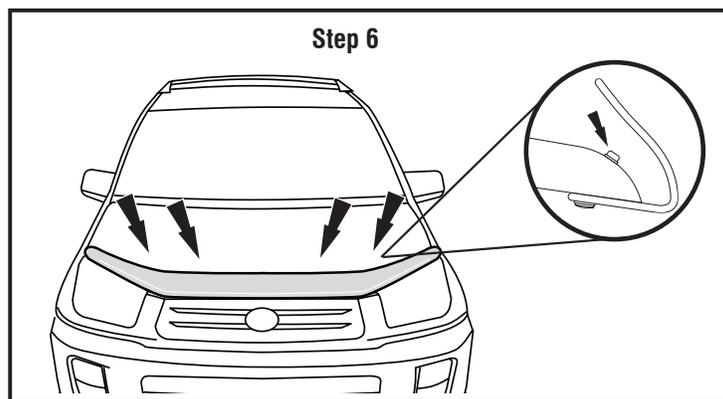
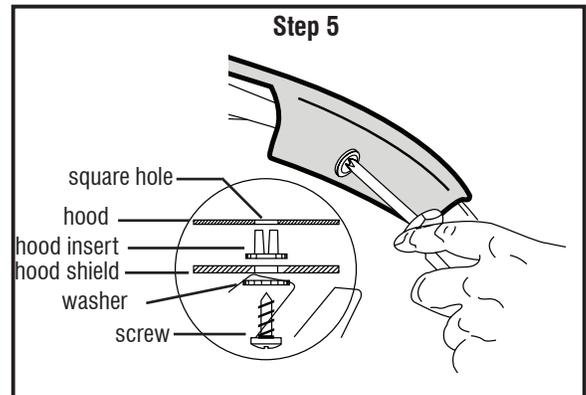
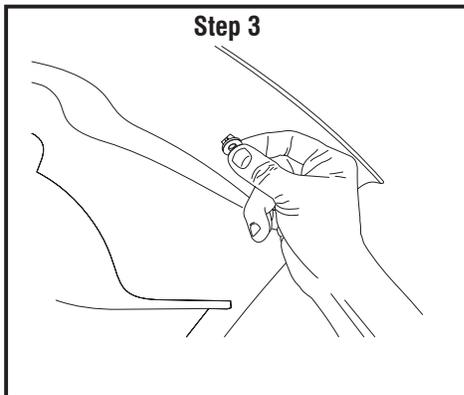


1. Open hood.
2. Locate (6) square holes on underside of hood.
3. NOTE: On vehicles equipped with factory weatherstrip, it is necessary to pull the weatherstrip down slightly to expose holes.
4. Press (6) hood inserts into the (6) square holes. If necessary use tape to hold them firmly in place. (See detail below.)
5. Align pre-drilled holes in hood shield with holes in hood. Place hood shield on hood. NOTE: On vehicles equipped with factory weatherstrip, the hood shield will slide **in between** the weatherstrip and the hood.
6. Using a phillips screwdriver install (6) screws with (6) washers at the locations noted in **Step 2**. (See detail below.)
7. Close hood, and install bump ons at pre-cleaned locations on the painted hood surface. (See detail below.)

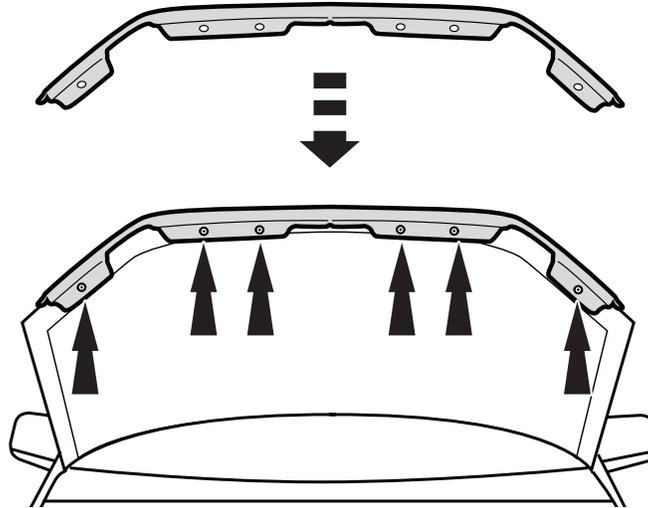

IMPORTANT: Before driving, ensure the hood shield is properly secured to vehicle. Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.