



This product is designed to be placed on the painted metal surface of the door.

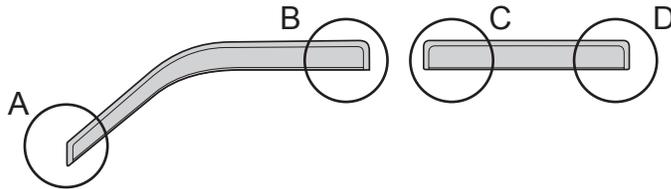


70°-100° F (Install temp.)

- 1 Clean painted door frame and mirror cap.
- 2 Hold visor in place and mark front and rear flange locations with masking tape.
- 3 Apply Surface Prep only to plastic/rubber sections where visor attaches. **DO NOT APPLY TO PAINTED SURFACES.** (Perform task for both sides of vehicle.) **NOTE:** When using Surface Prep, avoid contact with skin. Use in well ventilated area. If contact is made with material, flush area with large amounts of water. If irritation persists, get immediate medical attention. USE PREP ON RUBBER ONLY.
- 4 Remove tape liner from front & rear flanges. Peel back 2" (5 cm) of tape liner from each end of top flange.
- 5 Attach visor to door. Front flange attaches to outside of mirror cap, top flange to painted surface, and rear flange to door post.
- 6 Remove tape liner. Apply pressure to tape flanges to secure
- 7 For Rear Visors: Follow **Steps 1 thru 4** above.
- 8 Attach visor to door. Front flange attaches to door post, top & rear flanges to painted surface.
- 9 Remove tape liner. Apply pressure to tape flanges to secure.

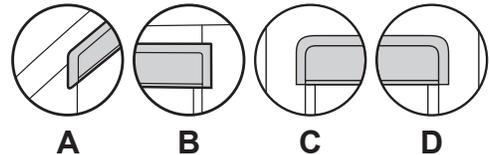


IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219

This product is designed to be placed on the painted metal surface of the door.

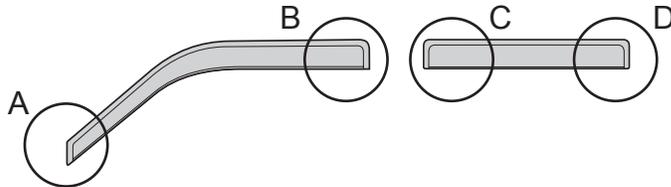

70°-100° F (Install temp.)

- 1 Clean painted door frame and mirror cap.
- 2 Hold visor in place and mark front and rear flange locations with masking tape.
- 3 Apply Surface Prep only to plastic/rubber sections where visor attaches. **DO NOT APPLY TO PAINTED SURFACES.** (Perform task for both sides of vehicle.) **NOTE:** When using Surface Prep, avoid contact with skin. Use in well ventilated area. If contact is made with material, flush area with large amounts of water. If irritation persists, get immediate medical attention. USE PREP ON RUBBER ONLY.
- 4 Remove tape liner from front & rear flanges. Peel back 2" (5 cm) of tape liner from each end of top flange.
- 5 Attach visor to door. Front flange attaches to outside of mirror cap, top flange to painted surface, and rear flange to door post.
- 6 Remove tape liner. Apply pressure to tape flanges to secure
- 7 For Rear Visors: Follow **Steps 1 thru 4** above.
- 8 Attach visor to door. Front flange attaches to door post, top & rear flanges to painted surface.
- 9 Remove tape liner. Apply pressure to tape flanges to secure.

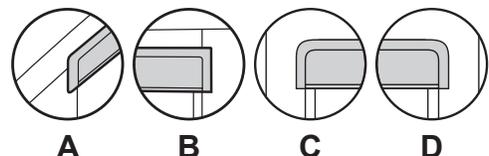

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219