

INSTALLATION INSTRUCTIONS

CUSTOMER SERVICE

Phone: 866-900-8800 • 8:30 am - 5:00 pm Mon - Fri CST

Email: info@undercoverinfo.com



MODEL SPECIFIC GUIDE


HIDDEN HINGE VERSION

2086

Model 2086 Ford F150 Ext/Crew Cab 5.5' Short Bed 2004-2008 (Will Fit Lincoln Mark LT- Bed Rails Must Be Removed)

RE: Step 2 on the Quick Start Guide

Measurement for the rear mounting bracket is 39 3/4" from the back side of the bulkhead to the front edge of the bracket.

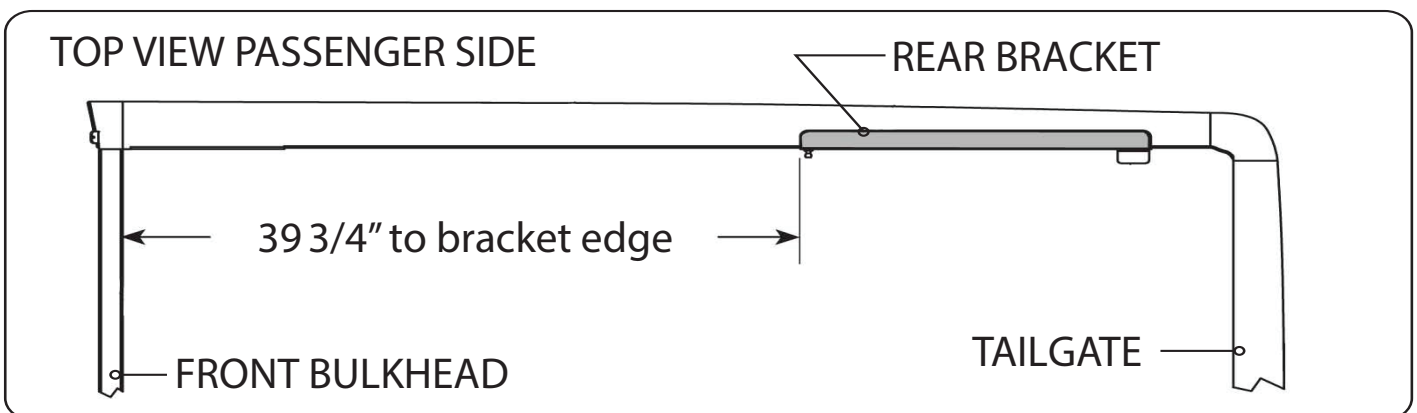

RE: Step 3 on the Quick Start Guide

Measurement for the front mounting bracket is 17 1/8" from the backside of the bulkhead to the end of the bracket.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

