

INSTALLATION INSTRUCTIONS

CUSTOMER SERVICE

Phone: 866-900-8800 • 8:30 am - 5:00 pm Mon - Fri CST

Email: info@undercoverinfo.com




MODEL SPECIFIC GUIDE

HIDDEN HINGE VERSION

Model 3096 Dodge Ram
Crew Cab 5.7' Bed 2019-Current
(Will Not Fit Ram Box/ Will Not Multifunction Tailgate)

RE: Step 2 on the Quick Start Guide

Measurement for the rear mounting bracket is 39 1/4" from the back side of the bulkhead to the front edge of the bracket.

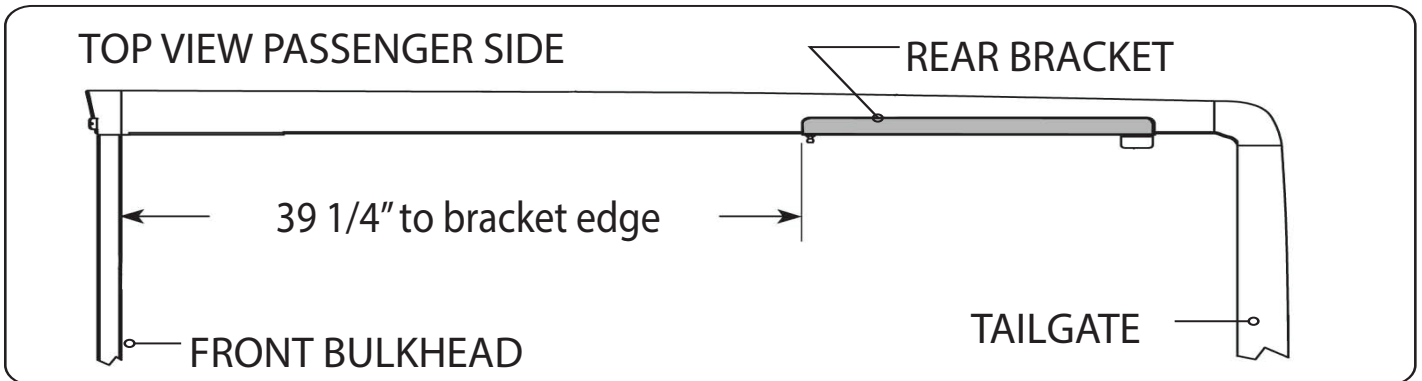

RE: Step 3 on the Quick Start Guide

Measurement for the front mounting bracket is 16 1/4" from the back side of the bulkhead to the end of the bracket.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

