




INSTALLATION INSTRUCTIONS/TEMPLATE PLOW SIDE WALL PN 67957

Application: Warn ATV Plow's

<u>PART NO.</u>	<u>QUANTITY</u>	<u>DESCRIPTION</u>
21331	2	5/16-18x1.0 Hex Cap Screw
22262	2	5/16" Flat Washer
1402	2	5/16" Lock Washer
69214	1	Thread locker
67959	1	Blade Side Wall

Tools required: 3/8" Drill
21/64" Drill Bit
Hammer
Center Punch
1/2" Wrench

1. Align the top edge of the template to the fold line near the top edge of the plow as shown below.

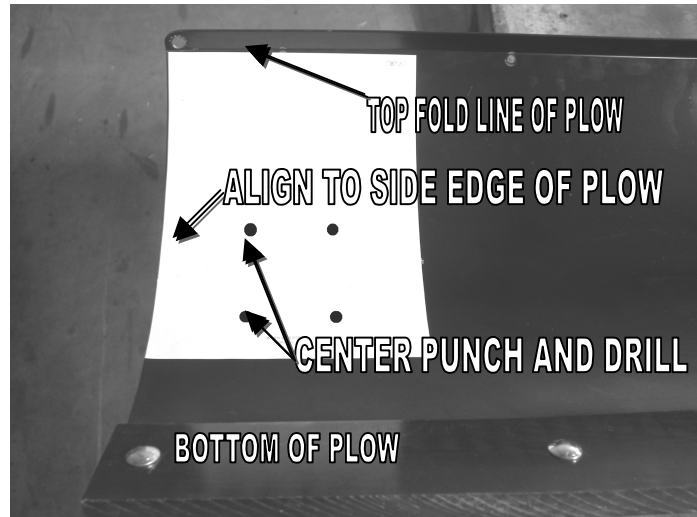

Picture shown is for left side of plow.

NOTE: Right and left sides are noted as looking at the plow.

2. Apply blue thread locker to 5/16"bolts, and torque to 17 ft-lbs.

ALIGN TO TOP FOLD LINE OF PLOW

ALIGN TO SIDE EDGE OF PLOW
FOR LEFT SIDE

ALIGN TO SIDE EDGE OF PLOW
FOR RIGHT SIDE

LEFT SIDE
CENTER PUNCH AND DRILL

RIGHT SIDE
CENTER PUNCH AND DRILL

