n-fab.com   **nfabinc** 🅕 🅣 🅘

HARDWARE DESCRIPTION	QTY.
HWKT-00424X	1
M8 Threaded clip	7
M8-1.25 Hex fin Nut	8
M8-1.25x25mm Black hex bolt	8
M8-1.25x25mm zinc hex bolt	7
M8 zinc washer	15
M8 black washer	8
M8 zinc lock washer	7
M10 carriage bolt	16
M10 hex nut	16

| PARTS INCLUDED	QTY
DRIVER SIDE	1
PASSENGER SIDE	1
MOUNTING BRACKET	8

DO NOT USE IMPACT TOOLS

Step 1: Identify Driver side step

DRIVER
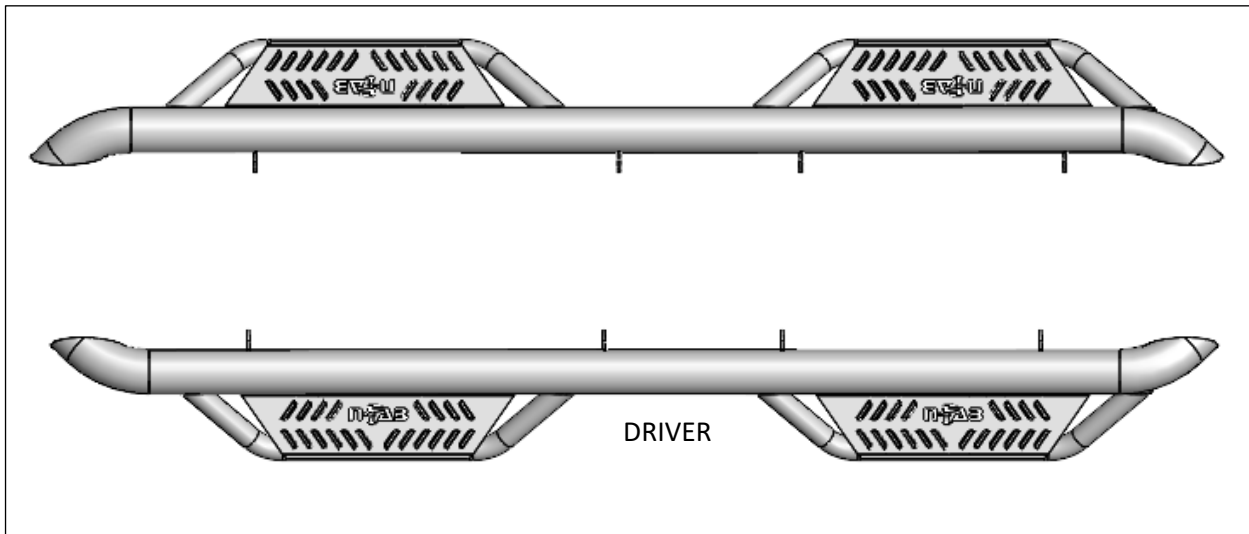
Step 2: Install the (x8) mounting brackets to each attachment point on the main tube using the supplied M10x25 carriage bolts, M10 hex nuts and leave loose for now.
**** *NOTE: The brackets will attach to the backside of the mounting flange with the threaded end of the carriage bolt facing towards the REAR of the step. ****
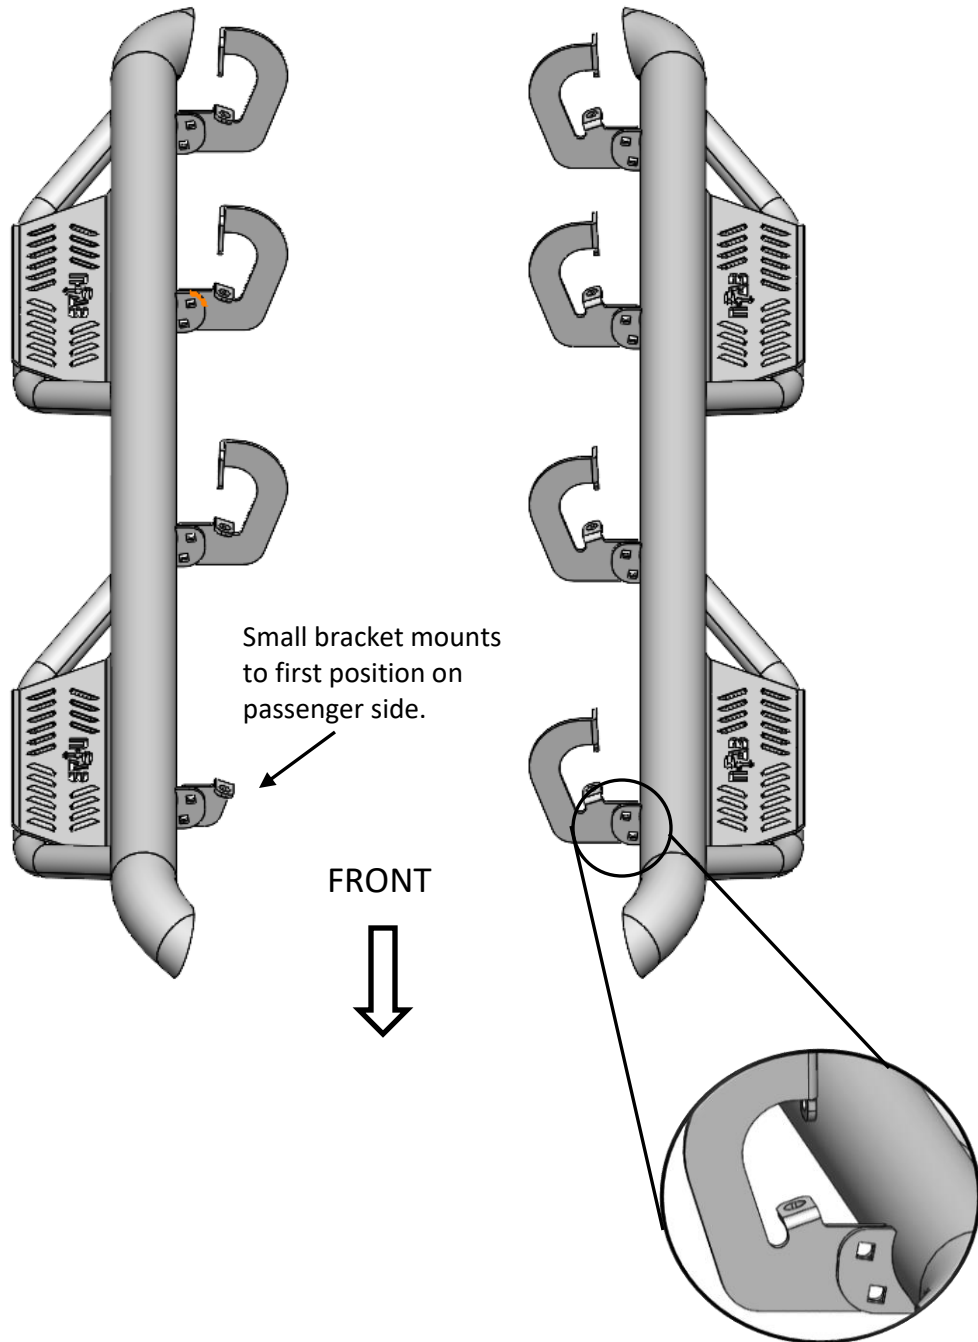
Small bracket mounts to first position on passenger side.

FRONT

Step 3: Look on the underside of the body and locate the factory supplied mounting positions. *NOTE: Some vehicles require the use of speed clips and nuts, which are supplied with the hardware kit.*

Step 4: If your vehicle requires the use of the speed clips, install at this time. This requires the removal of a plastic body plug. Using a flat head screwdriver remove the plug and install one of the supplied speed clips.

Step 5: Install the Nerf Step to the mounting locations in the body of the vehicle and install hardware. Do not tighten all the way. *NOTE: Some vehicles may require the use of additional nuts and washers for the lower portion of the mounting bracket which are supplied in the hardware kit*

NOTE: Black bolts and washers mount on the lower part of the bracket

Step 6: Next, tighten all hardware beginning with the lower mounts first then the upper mounting locations.

Step 7: After finial adjustment, tighten all three brackets at the main tube.
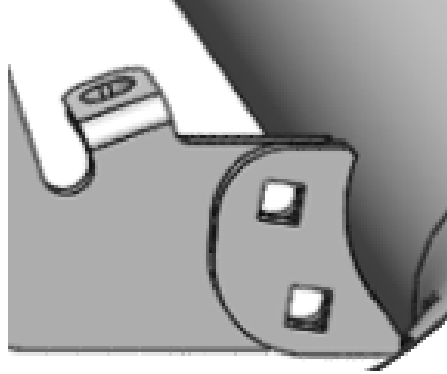
Step 8: Repeat steps 2-7 with passenger side. Your install is now complete.