




Installation Instructions

Cat-Back Single Exhaust

Ford F250/F350/F450 Super Duty, 6.7L Diesel 2/4wd
Crew Cab, Long Bed

Part #319658

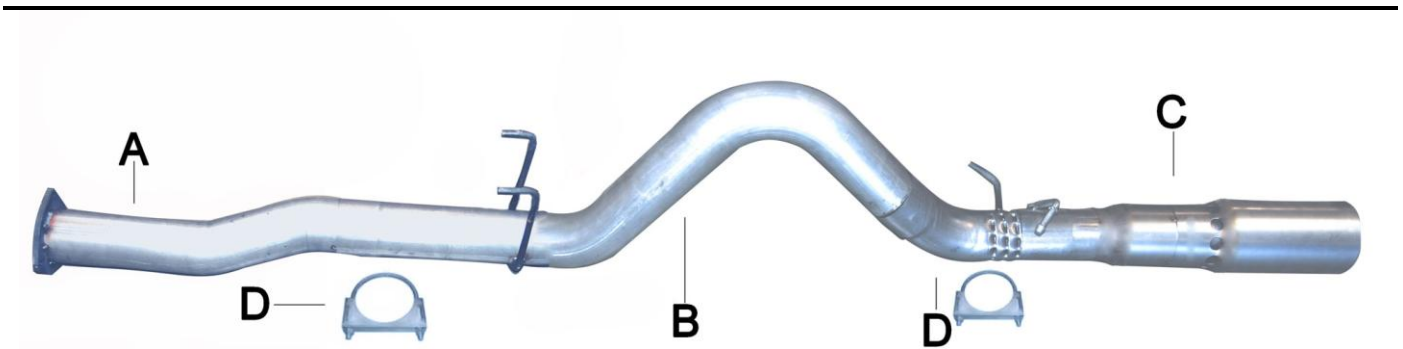

ITEM	PART	QUANTITY	DESCRIPTION
A	701139	1	4" Headpipe
B	701140	1	4" Overaxle Tailpipe
C	701141	1	4" Exit Pipe with welded 6" stainless Tip
D	4171	2	4" CLAMP

Thanks for purchasing our Gibson Exhaust System for your Vehicle
If you need further assistance, please do not hesitate to call our technical department at
(800) 528 -3044 Monday through Friday, 8am to 5 pm.

Installation Instructions #319658

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

SUGGESTED TOOLS: 1/2", 9/16", 15mm wrenches & sockets, WD-40, hacksaw, jack stands

1. Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.



2. To remove your stock exhaust, remove it from the 3 bolt flange located just behind the converter. Disengage the welded hangers from the OEM rubber grommets. Use WD-40 to aid in the process. Do not damage or remove the rubber grommets as you will re-use them. Now, cut off tailpipe and remove exhaust. You also will re-use your factory nuts.



5. Adjust to fit properly then tighten all clamps and bolts. Use stainless steel cleaner to prevent tip from discoloration, Inspect all fasteners after 25-50 miles & retighten as necessary



3. Install headpipe #A onto your existing stock front pipe Re-using the factory nuts.



4. Install the over axle tailpipe #B onto headpipe 1.5"-2". Use clamp #D to secure. Do not Tighten

GIBSON EXHAUST systems are designed on a factory stock vehicle
Any aftermarket products installed could increase the sound levels of the exhaust.

Make sure there is a 1" clearance from ALL rubber brake lines, shock boots, lines, tires, etc. to prevent heat related damage or fire