




**INSTALLATION INSTRUCTIONS**  
**CAT BACK SUPER TRUCK EXHAUST**

DODGE RAM 1500 TRUCK 4.7L QUAD CAB, CAB SHORT BED  
DODGE RAM 1500 TRUCK 5.7L QUAD CAB, SHORT BED  
PART # 6563

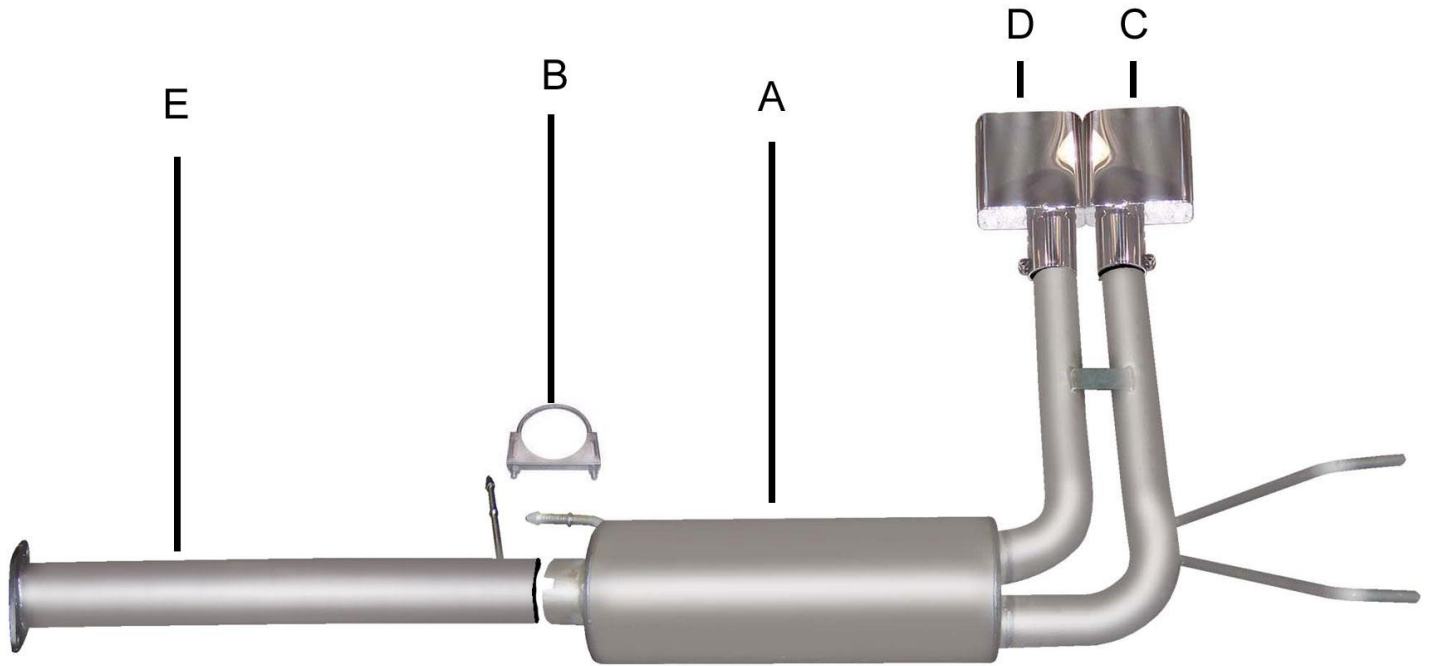

ITEM	PART #	QUANTITY	DESCRIPTION
A	701056	1	MUFFLER ASSEMBLY
B	OHD300	1	3" CLAMP
C	500366	1	SUPER TRUCK TIP
D	500365	1	SUPER TRUCK TIP
E	701074	1	3" HEADPIPE

**Thank you for purchasing our Gibson exhaust system for your vehicle. If you need further assistance, please do not hesitate to call our technical dept at (800) 528-3044 Monday through Friday, 8:00 am to 5:00 pm.**

## CAREFULLY READ INSTRUCTIONS BEFORE STARTING INSTALLATION.

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

**SUGGESTED TOOLS:** 1/2", 9/16" 15mm wrenches & sockets, WD-40, hacksaw, jack stands.

.....  
• **Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.**  
.....

## DO NOT REMOVE STOCK HEADPIPE.



**1.** To remove the stock exhaust remove it from the clamp located in front of your stock muffler. Use WD-40 to aid in removal of hangers from rubber grommets. Next measure 30" from end of pipe towards front of the vehicle and cut here.



**2.** Insert muffler assembly #A into headpipe head pipe and attach with clamp #B. **DO NOT TIGHTEN** Use a jack stand to support the muffler assembly.



**3.** Insert welded hangers into rubber grommets.



**4.** Install stainless steel tips. Clamp down. When you have everything in place, firmly tighten all bolts and clamps down securely. Use stainless steel cleaner and a Scotch Brite pad weekly to prevent tip from discoloration. Inspect all fasteners after 25-50 miles of operation and re-tighten as necessary